Black-Stone Vline Wall-Mounted Cabinet

OWNER'S MANUAL

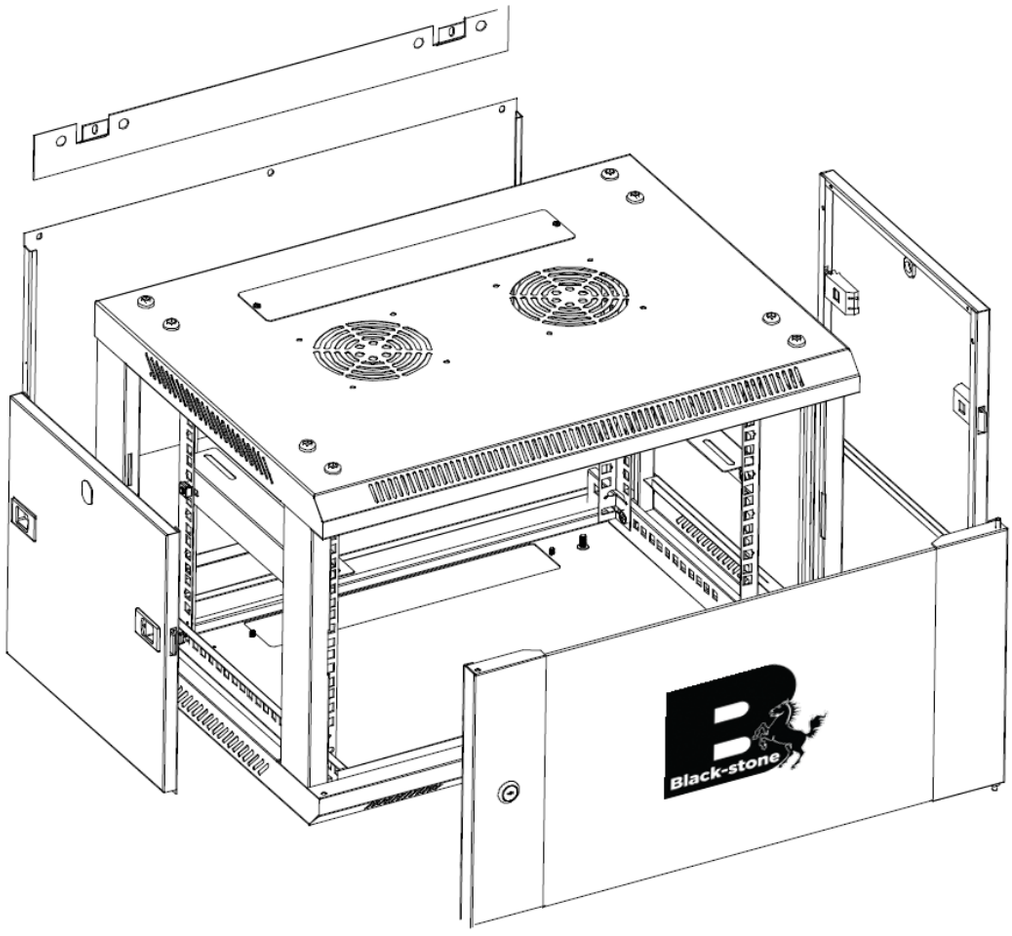

Packing List

1-Top Tray - 1pcs
2-Bottom Tray - 1pcs
3-Horizontal Support - 4pcs
4-Vertical Support - 4pcs
5-Side Door - 2pcs
6-.Cover Panel - 2pcs
7-L Mounting Rail - 2pcs
8-Back Panel - 1pcs
9-Mounting Back Panel - 1pcs
10-Front Door - 1pcs
11-Frame-2pcs

Accessories Package list

1-M8*12 Inner Hexagon Screw - 16pcs
2-M8 Flange Nut - 16pcs
3-M6 Plastic Washer=12pcs
4-M6*12 screw - 12pcs
5-M6 Stainless Steel Square Nut - 12pcs
6-M4*8 Self-tapping Screw - 12pcs
7-3mm Plastic Washer - 1pcs

Black-stone

© 2022 InfraStone , LLC

info@infrastone.com

Cabinet Assembly

1. Assembling the Top, Frame, Bottom, and Horizontal Supports

Insert the Left Frame (#5) and Right Frame (#6) into the Bottom Panel (#2). Secure with M5 Screws (A).

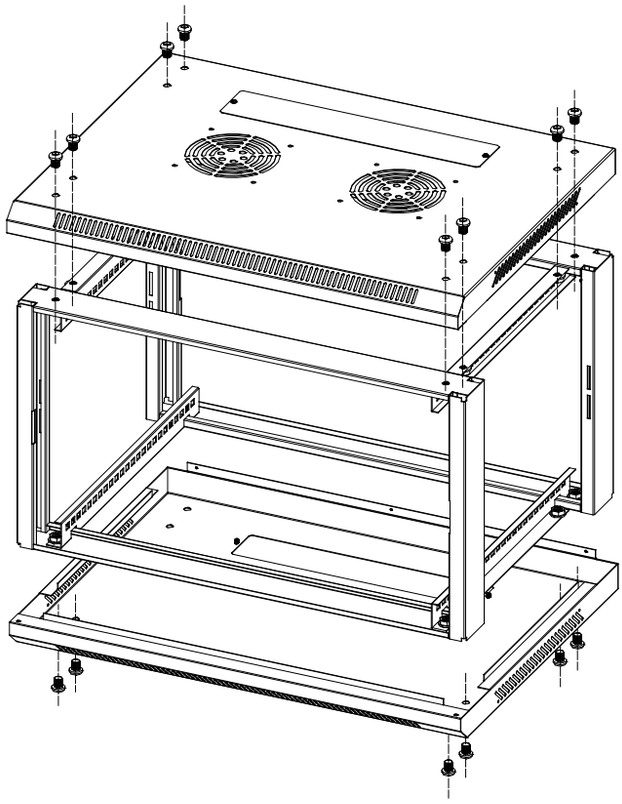

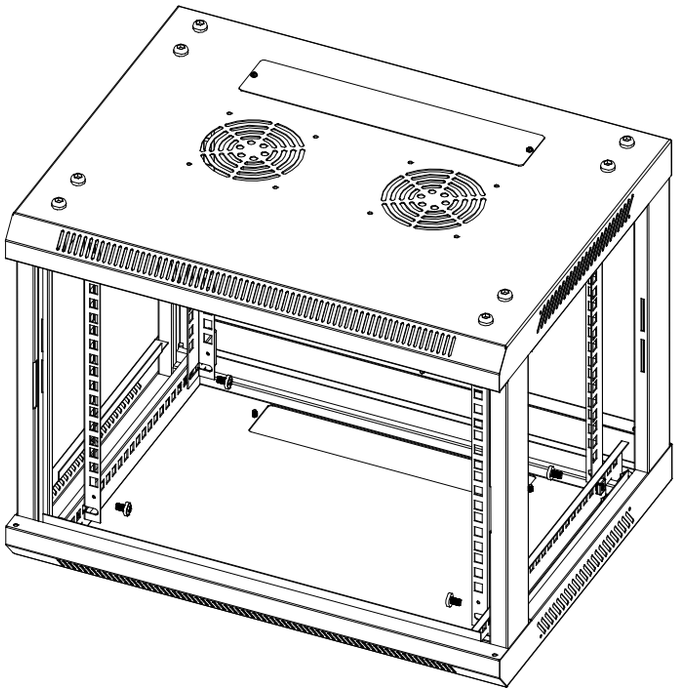

2. Attaching the Vertical Supports

Attach the vertical supports to the horizontal supports using M6*12 screws and M6 stainless steel square nuts.
Refer to the picture for guidance.

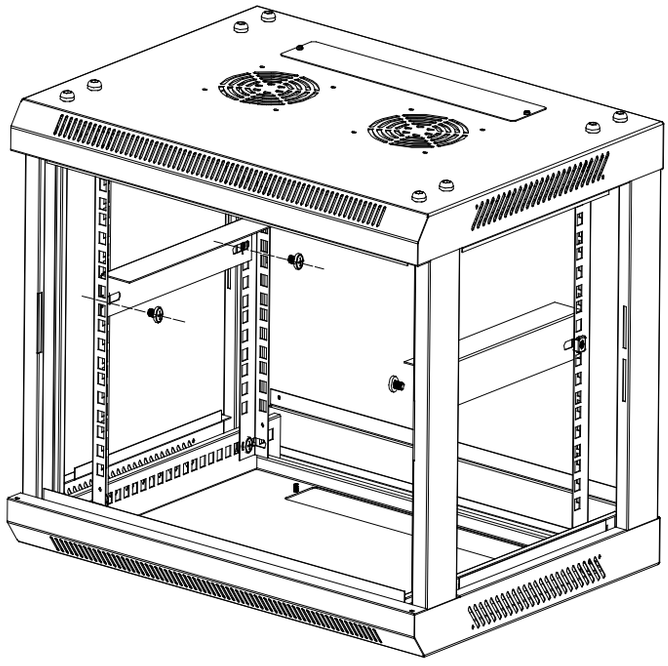

3. Securing the L-Type Mounting Rails

Secure the L-type mounting rails to the vertical supports using M6*12 screws and M6 stainless steel square nuts.
Refer to the picture for proper placement.

Black-stone

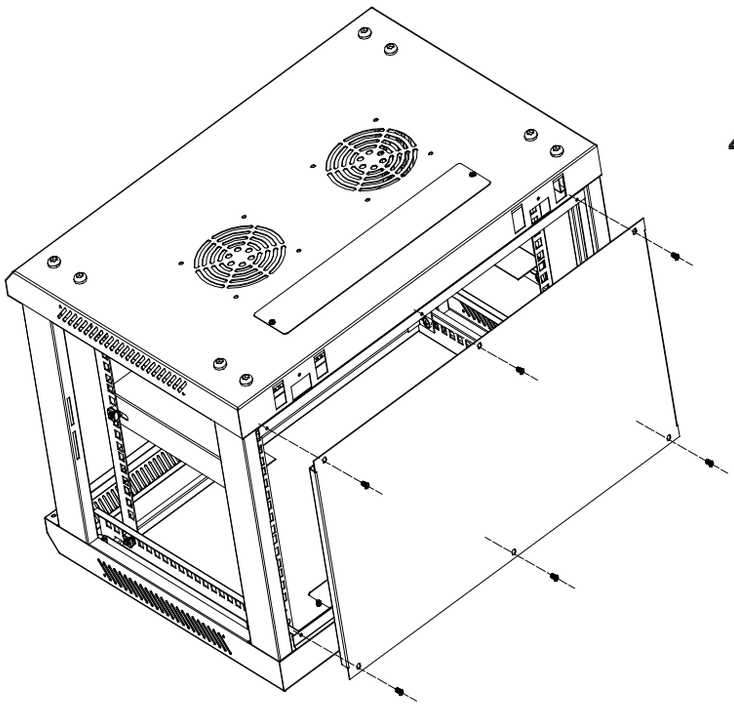

4. Installing the Back Panel

Attach the back panel using M4*8 self-tapping screws.
Refer to the picture for correct positioning.

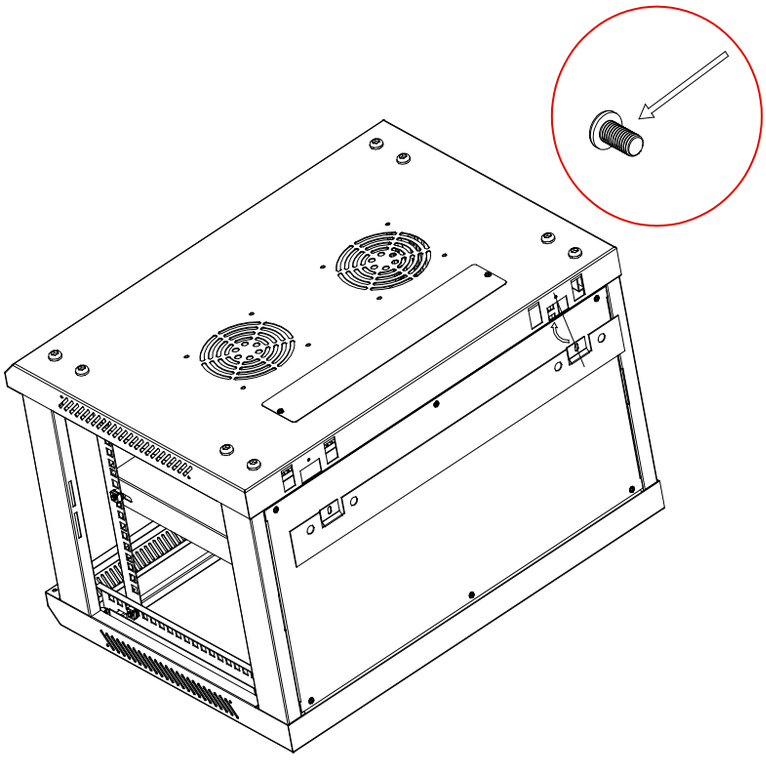

5. Mounting the Back Panel

Install the mounting back panel with M4*8 self-tapping screws.
Refer to the picture for assistance.

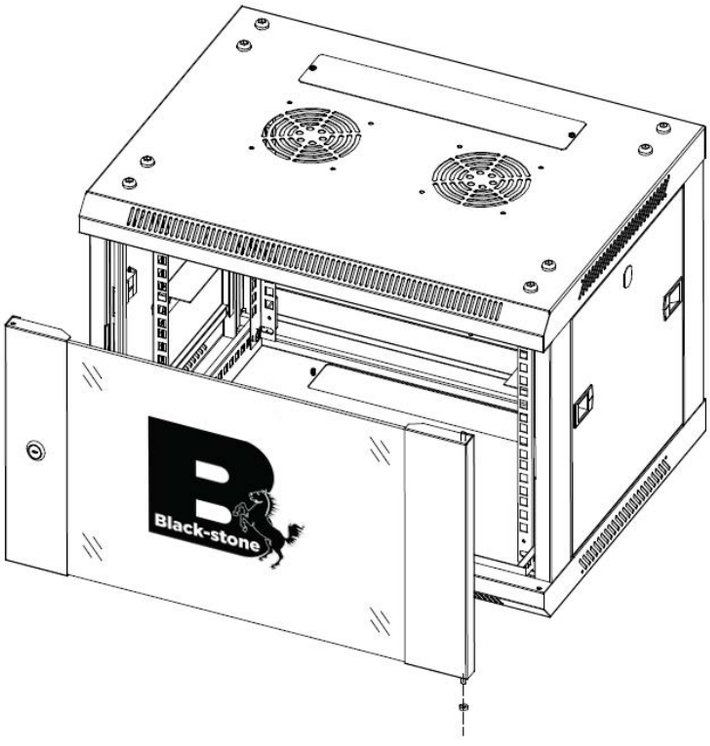

6. Attaching the Front and Side Doors

Assemble the front door by connecting it with the top and bottom panels. Attach the side doors using a tool-free assembly method.
Refer to the picture for additional guidance.

Black-stone